

# Extra help: Certificates

This section contains tips to help you with some common challenges of using certificates.

Certificate options do not appear in the GUI.

Go to **System > Features > Config** and select **Show More**. Enable the **Certificates** feature.

A new certificate must be used.

Go to **System > Certificates > Local Certificates** and select **Import**.

A new certificate must be generated.

First, go to **System > Certificates > Local Certificates** and select **Generate**. Fill in the required fields. The certificate must then be either self-signed or signed by a third party. Finally, import the new certificate.

Certificate warnings appear when users attempt to authenticate.

Go to **User & Device > Authentication > Settings** and set **Certificate** to use the correct certificate.

The wrong certificate appears when using an SSL-VPN.

Go to **VPN > SSL > Config** and set **Server Certificate** to use the correct certificate.